

INSTALLATION INSTRUCTIONS

For Chain Hung Light Fixtures

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.

PREPARING FOR INSTALLATION (Fig. 1)

1. Shut off the power at the fuse box or circuit breaker box and remove the old fixture from the ceiling, including the mounting hardware.
2. Carefully unpack your new fixture and lay out all the parts in a clear area. Take care not to misplace any small parts necessary for installation.
3. Determine the desired hanging height and use a pair of proper chain pliers to remove and discard the excess chain.
4. Open one end of chain and attach it to the fixture chain loop (A) and close the chain. Slip the canopy and lock collar over the chain and allow them to rest on the fixture body. Open the other end of the chain and attach it to chain loop and close the chain.
5. Lace the fixture wires through the chain, canopy and nipple.
6. Thread the nipple into the chain loop until snug.
7. Thread the other end of the nipple with the chain loop into the crossbar. The length of thread secured into the crossbar may be adjusted if needed.
8. Place the lock washer over the end of the nipple (protruding through the back of the crossbar) and secure with the hex nut until tight.
9. Feed the fixture wires through the loop, canopy and nipple.

CONNECTING THE WIRES (Fig. 2)

10. While carefully holding the fixture, connect the electrical wires as shown in Fig. 2. Making sure that all wire connectors are secured. If your junction box has a ground wire (green or bare copper), attach this wire and the bare copper wire from the fixture together. Otherwise, attach the bare copper fixture wire to the crossbar using the green screw provided.
11. Secure the crossbar assembly to ceiling outlet box with the outlet box screws. Tighten screws securely.
12. Tuck the wire connections neatly into the ceiling outlet box and then raise the canopy to the ceiling. Thread the lock collar to the chain loop to secure the canopy against the ceiling.

FINISHING THE INSTALLATION (Fig. 1)

13. At this point, install the light bulb (not included) from the bottom directly in accordance with the fixture specification. **(DO NOT EXCEED THE MAXIMUM WATTAGE RATING)**

Your installation is now complete. Return power to the outlet box and test the fixture.

Fig. 1

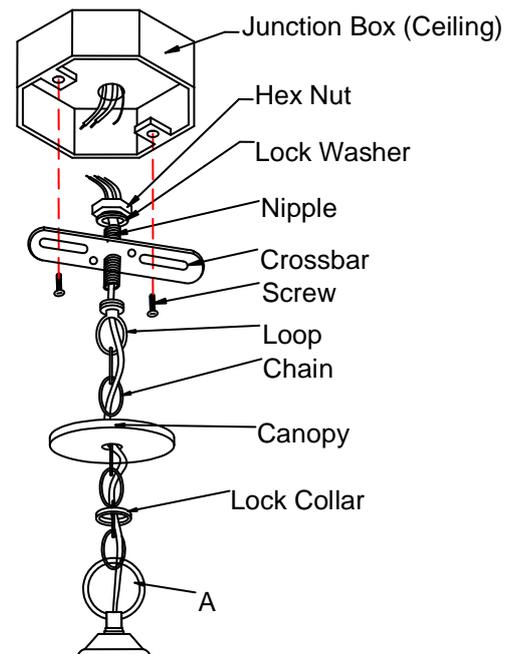


Fig. 2


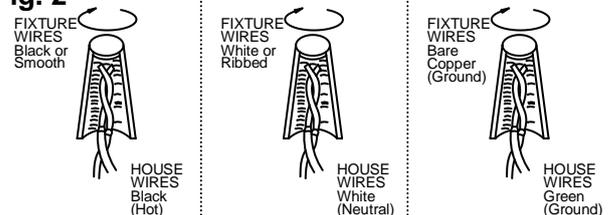


Fig. 3



Notice: It is important to use proper chain pliers (not included) To OPEN and CLOSE the chain included with this fixture. Do not open them with other tools that may twist or stress the chain links. It is important to use proper chain pliers like the ones shown in the diagram.

LA-2001E

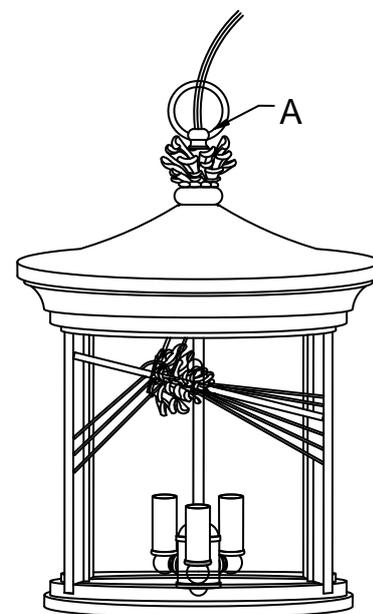

american lighting association